

Working range - 680H-TM




24,38 m
(80 ft)



100%



360°

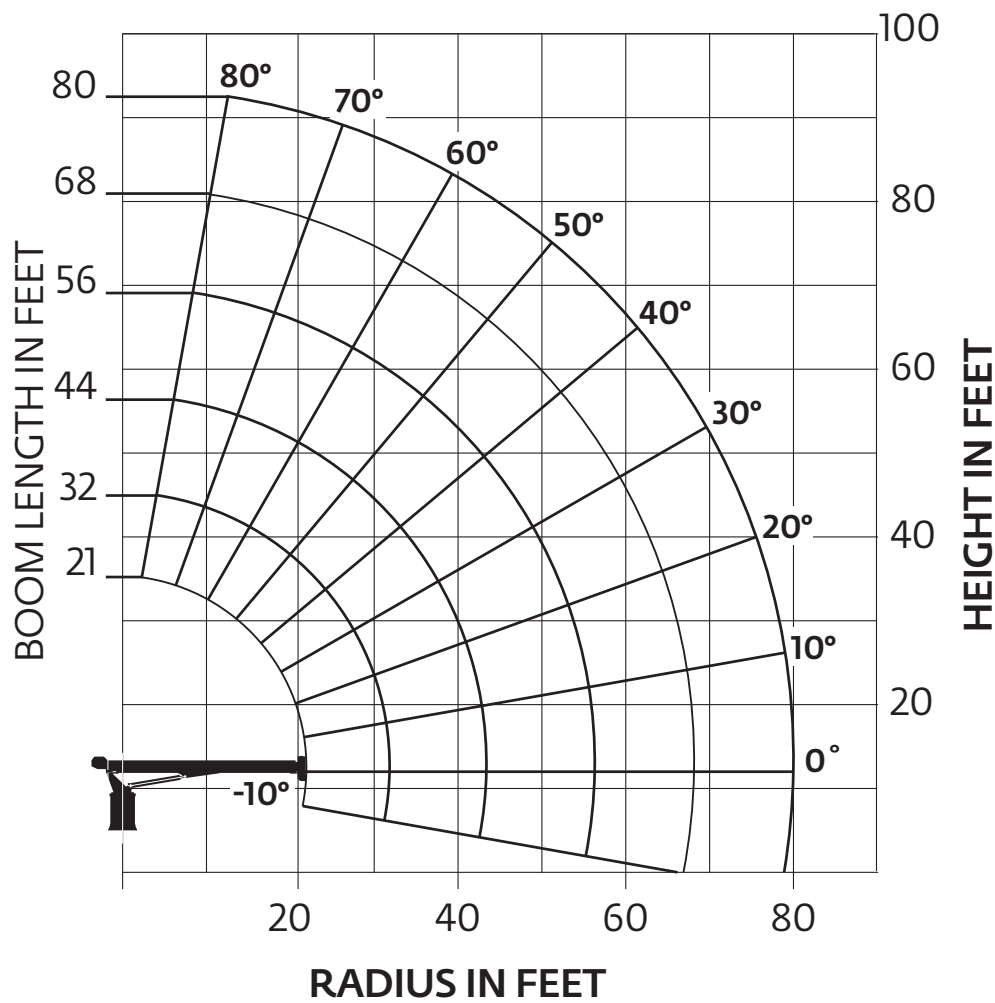

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart - 680H-TM



7,32 m - 24,38 m
(24 ft - 80 ft)



100%



360°



Pounds

LOADED RADIUS (ft)	LOADED BOOM ANGLE (deg)	21 FT BOOM (lb)	LOADED BOOM ANGLE (deg)	32 FT BOOM (lb)	LOADED BOOM ANGLE (deg)	44 FT BOOM (lb)	LOADED BOOM ANGLE (deg)	56 FT BOOM (lb)	LOADED BOOM ANGLE (deg)	68 FT BOOM (lb)	LOADED BOOM ANGLE (deg)	80 FT BOOM (lb)
5	73	40,000										
8	64	27,000	74	18,000								
10	57.5	21,400	70	18,000	76	16,500						
12	51	18,450	66	18,000	73.5	16,500	77.5	13,200				
14	43.5	16,400	62	16,400	71	16,500	75.5	13,200	80	10,700		
16	34	14,750	57.5	14,750	67.5	14,750	73.5	12,600	78	10,100	79	6800
20			48.5	11,250	61	11,400	69	11,150	74	9250	76	5600
25			34.5	8900	53.5	9150	63	9150	69	8100	72	5100
30					45	7200	56.5	7200	64.5	7200	68.5	4400
35					34.5	6400	50.5	6400	59.5	6400	64.5	3850
40					20	5300	43	5150	54	5000	60	3400
45							35	4150	48	4000	56	2950
50							24	3400	42	3250	51.5	2600
55									35.5	2650	46.5	2300
60									27	2250	41	1950
65									13	1900	35	1650
70											29	1400
75											18	1200
	0	7500	0	5000	0	3900	0	2400	0	1500	0	1200

NOTE:

1. All capacities are in pounds, angles in degrees, radius in feet.
2. Loaded boom angles are given as reference only.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.